




Mount and Unmount MOD disk to SCO Unix

This procedure describes how to mount and unmount MOD disk under SCO Unix computer environment in order to virtualize it.

Written By: Petr Roupec




```
a01spb.root # scoadmin
```

INTRODUCTION


Procedure ID: P0025.01-EN-2016-12-25 - MOD Drive connection

Step 1 — SCO Admin Program

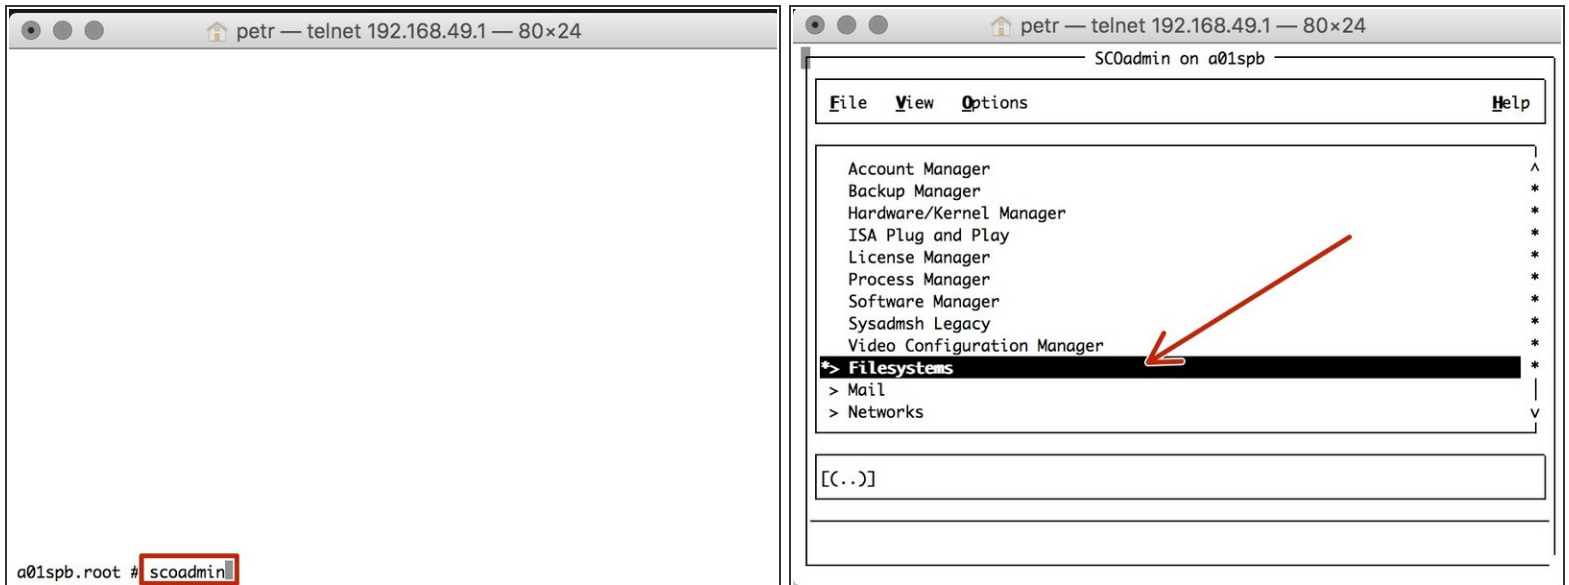

- After login to the computer start scoadmin program
- ❗ Switch between menu by **TAB** key and navigate by **arrows**
- Select file systems and hit ENTER Key


Step 2 — Open and Use File System Manager

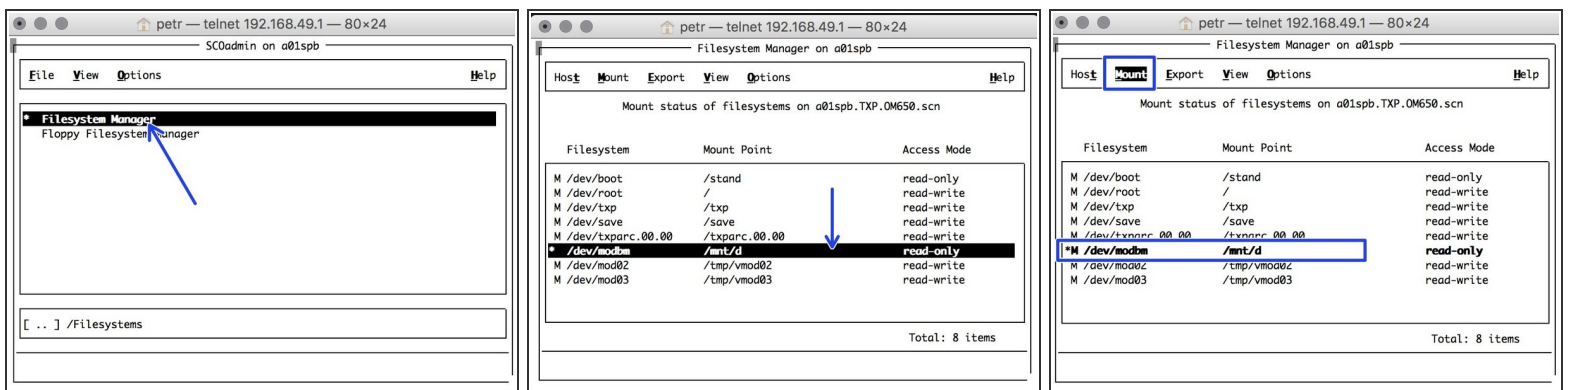

⚠ Insert MOD disk and WAIT until yellow LED Goes off

- Go to bottom window and select line /dev/modbm and navigate by TAB key to menu section
- In menu section selection mount

Step 3 — Mount / Unmount MOD Disk

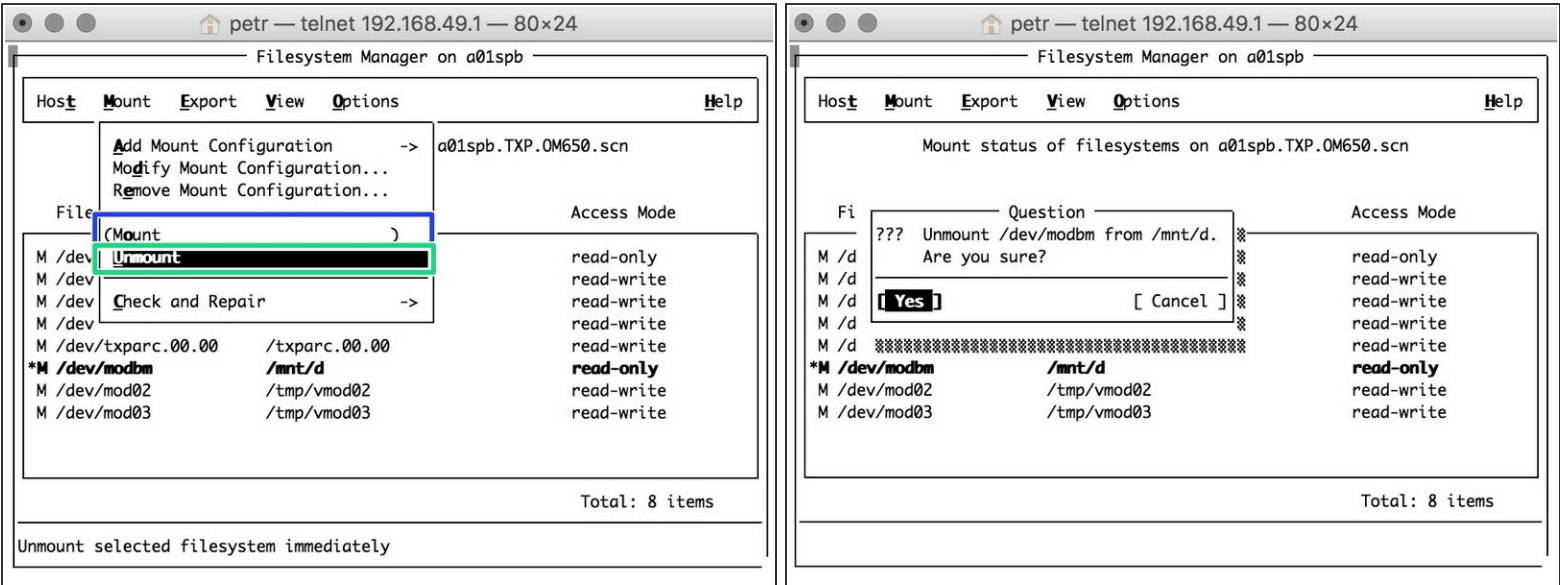

- Mount MOD drive
- Start copying disk as per separated procedure
- Unmount disk when done